

### **DIRECTIONS FOR ELECTRIC BOWLING #403**

Set two standard flashlight batteries into battery pockets with both brass tips pointing toward the top of the game.

Set up the ten pins on the alley spots. Turn the aim adjuster arm at the **top** center of the game to where you feel it will guide your ball to a perfect hit.

Now turn clockwise, by hand, the motor arm in the **lower right** hand corner.

Place the ball next to this arm. The further back the arm and the further back the ball, the more speed. You may at some time want the ball to go slower. This can be varied by position of arm and ball.

Press the **ELECTRIC KEY** and **hold it down**. The ball will revolve around the little circle, take off up the runway, go around the curve, glide into the adjuster arm and down the alley toward the pins.

Play the game according to regular bowling score.

Be sure to turn back motor arm for each roll.

**THE ELECTRIC GAME CO., INC.**  
**Holyoke, Mass.**